

# Aufbauanleitung "IsoFrame Wave" Prospekthalter

## Mounting instruction

### Brochure holder system

#### Uncut wires

IS-9310 Wire system with 4 meter (157.5") wires

#### Pre-cut wires

IS-9311 Wire system for Midi 2470 mm (97.2") panels

IS-9312 Wire system for Maxi 2270 mm (89.4") panels

IS-9318 Brochure holders A4 / US letter with 4 connectors

Please observe: This system can only be used with a straight Compact or Straight graphic wing module



## Mounting instruction



**1** Push in the small H-profile at the top of the beam and then mount the extra beam into top of that profile.



**2** Mount this assembly at top of the posts.



**3** Attach the graphic panel and adjust the base beam so that its bottom edge aligns exactly with the bottom edge of the graphic.



**4** Push the top connector of the wire assembly into the top beam.




**5** Mount the first bottom connector.



**6** Push the bottom fitting of the wire assembly into the connector until the wire is tight. Repeat this process with the top fitting.



**7** Attach the four identical grip connectors to the brochure holder, evenly spaced. Do not overtighten.

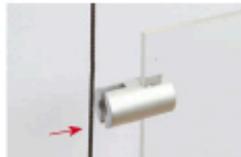

**8** Remove the side screws in the grip connectors, position the wire inside the grooves, and reinstall the side screws.



**9** You can now attach more brochure pockets.